



# DYNAMIC QUICK CONNECTOR HANDLE BEARING REPLACEMENT GUIDE

## YOU WILL NEED:

### AVAILABLE FROM YOUR DYNAMIC DISTRIBUTOR:

- DYNAMIC D-TOOL
- DYNAMIC GREASE APPLICATOR
- FOOD GRADE GREASE
- 2X UNIVERSAL BEARINGS
- 2X DYNAMIC UNIVERSAL QUICK CONNECTOR SEALS
- DYNAMIC QUICK CONNECTOR LARGE SEAL

### YOU WILL ALSO NEED:

- ADJUSTABLE SPANNER



- A. DYNAMIC BEARING HOLDER DRIVER
- B. DYNAMIC UNIVERSAL BEARING
- C. BEARING HOLDER SPACER
- D. DYNAMIC UNIVERSAL BEARING
- E. DYNAMIC X-DRIVE SHAFT CONNECTOR
- F. DYNAMIC QUICK CONNECTOR INCLUDING 3 SEALS  
(1X LARGE SEAL 2X UNIVERSAL SEALS )





- PLACE DYNAMIC D-TOOL OVER THE DYNAMIC QUICK CONNECTOR SO THE SLOTS FIT INTO THE TWO HOLES.



▪ THE DYNAMIC D-TOOL  
SHOULD FIT TIGHTLY  
OVER THE DYNAMIC  
QUICK CONNECTOR AND  
NOT BE ABLE TO MOVE.



▪ USING AN ADJUSTABLE  
SPANNER PLACED ONTO  
THE DYNAMIC D-TOOL,  
LOOSEN THE DYNAMIC  
QUICK CONNECTOR IN  
AN ANTI-CLOCKWISE  
DIRECTION.



- REMOVE THE DYNAMIC QUICK CONNECTOR AND THE DYNAMIC BEARING HOLDER FROM THE HANDLE.






- REMOVE THE DYNAMIC BEARING HOLDER FROM THE DYNAMIC QUICK CONNECTOR REMOVE THE LOOSE DYNAMIC UNIVERSAL RACER BEARING AND BEARING HOLDER SPACER FROM THE BEARING HOLDER



- UNSCREW THE DYNAMIC BEARING HOLDER DRIVER FROM THE DYNAMIC X-DRIVE SHAFT CONNECTOR RELEASING THE DYNAMIC UNIVERSAL RACER BEARING



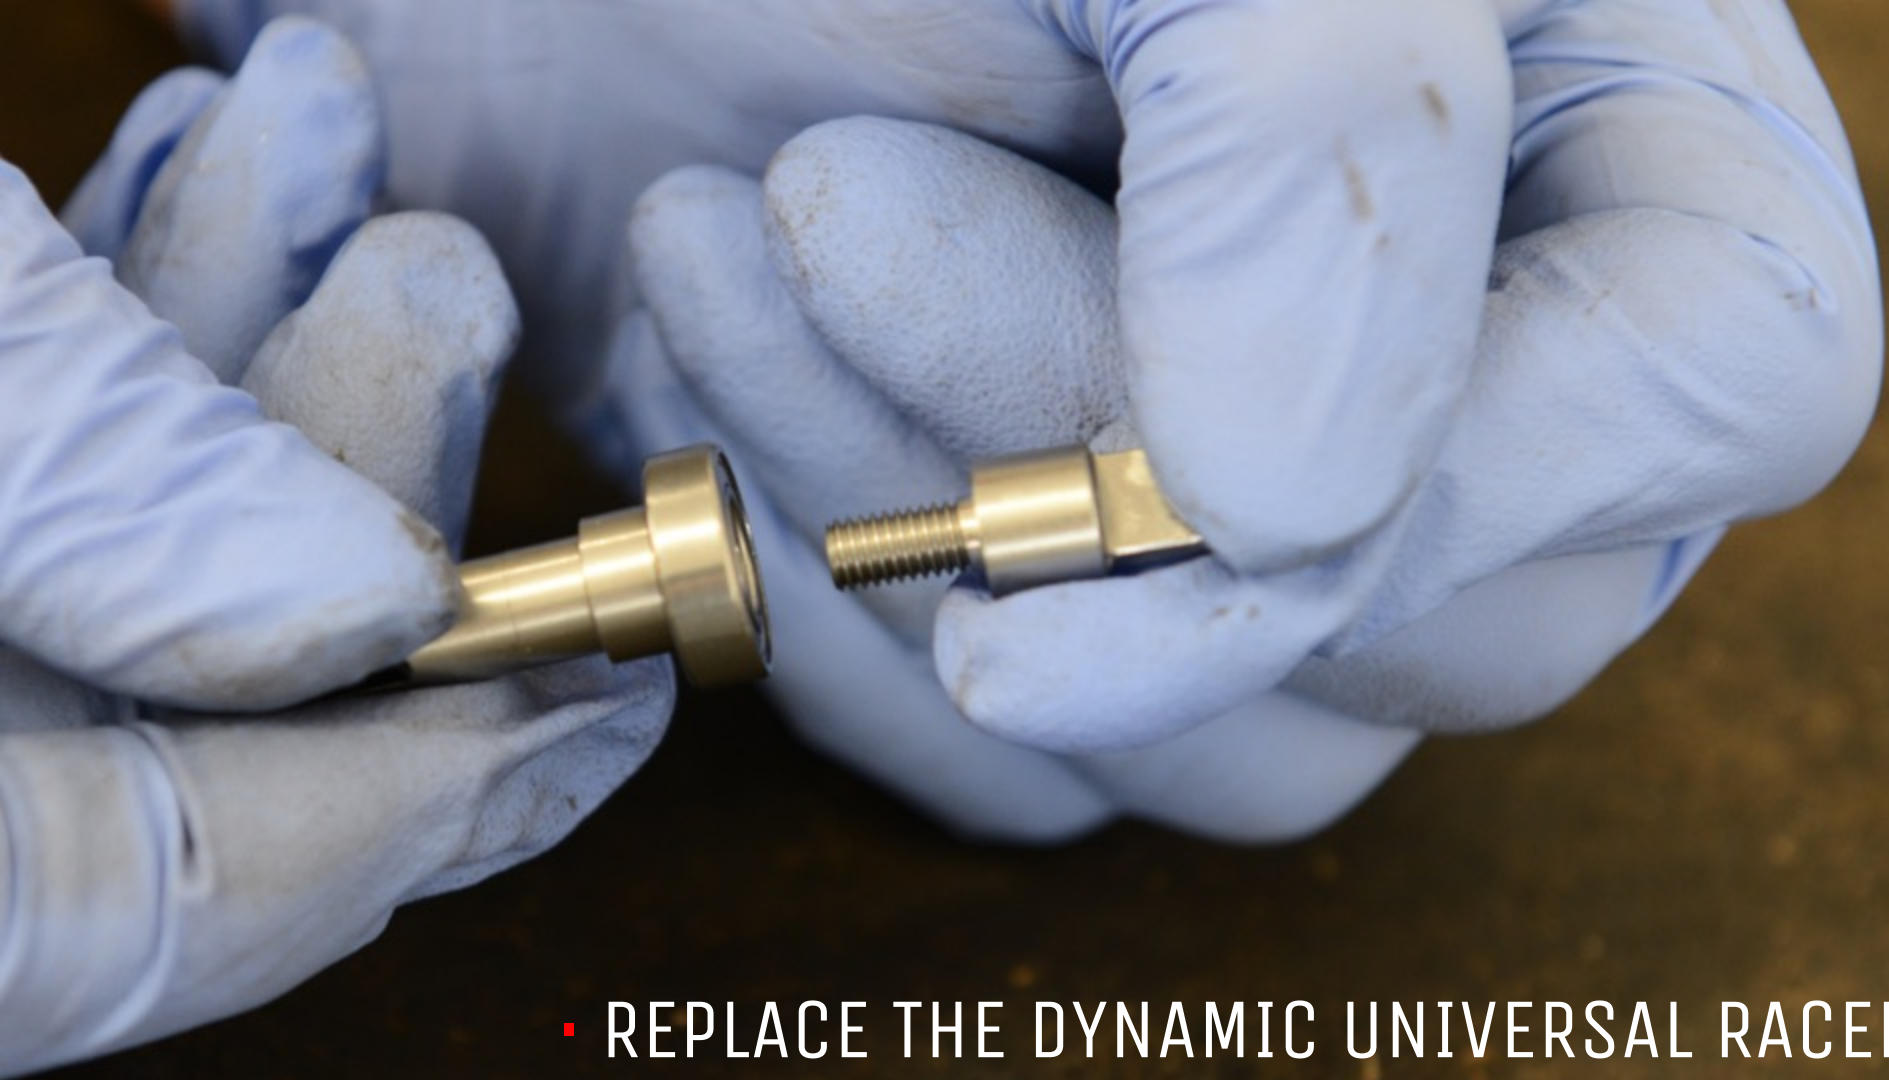

- REPLACE THE DYNAMIC UNIVERSAL RACER BEARING AND SCREW THE DYNAMIC BEARING HOLDER DRIVER BACK ON TO THE DYNAMIC X-DRIVE SHAFT CONNECTOR






- PLACE THE DYNAMIC HOLDER SPACER AND THE DYNAMIC UNIVERSAL RACER BEARING OVER THE DYNAMIC X-DRIVE SHAFT CONNECTOR



- GREASE THE DYNAMIC BEARING HOLDER WITH A SMALL AMOUNT OF GREASE USING THE DYNAMIC GREASE APPLICATOR



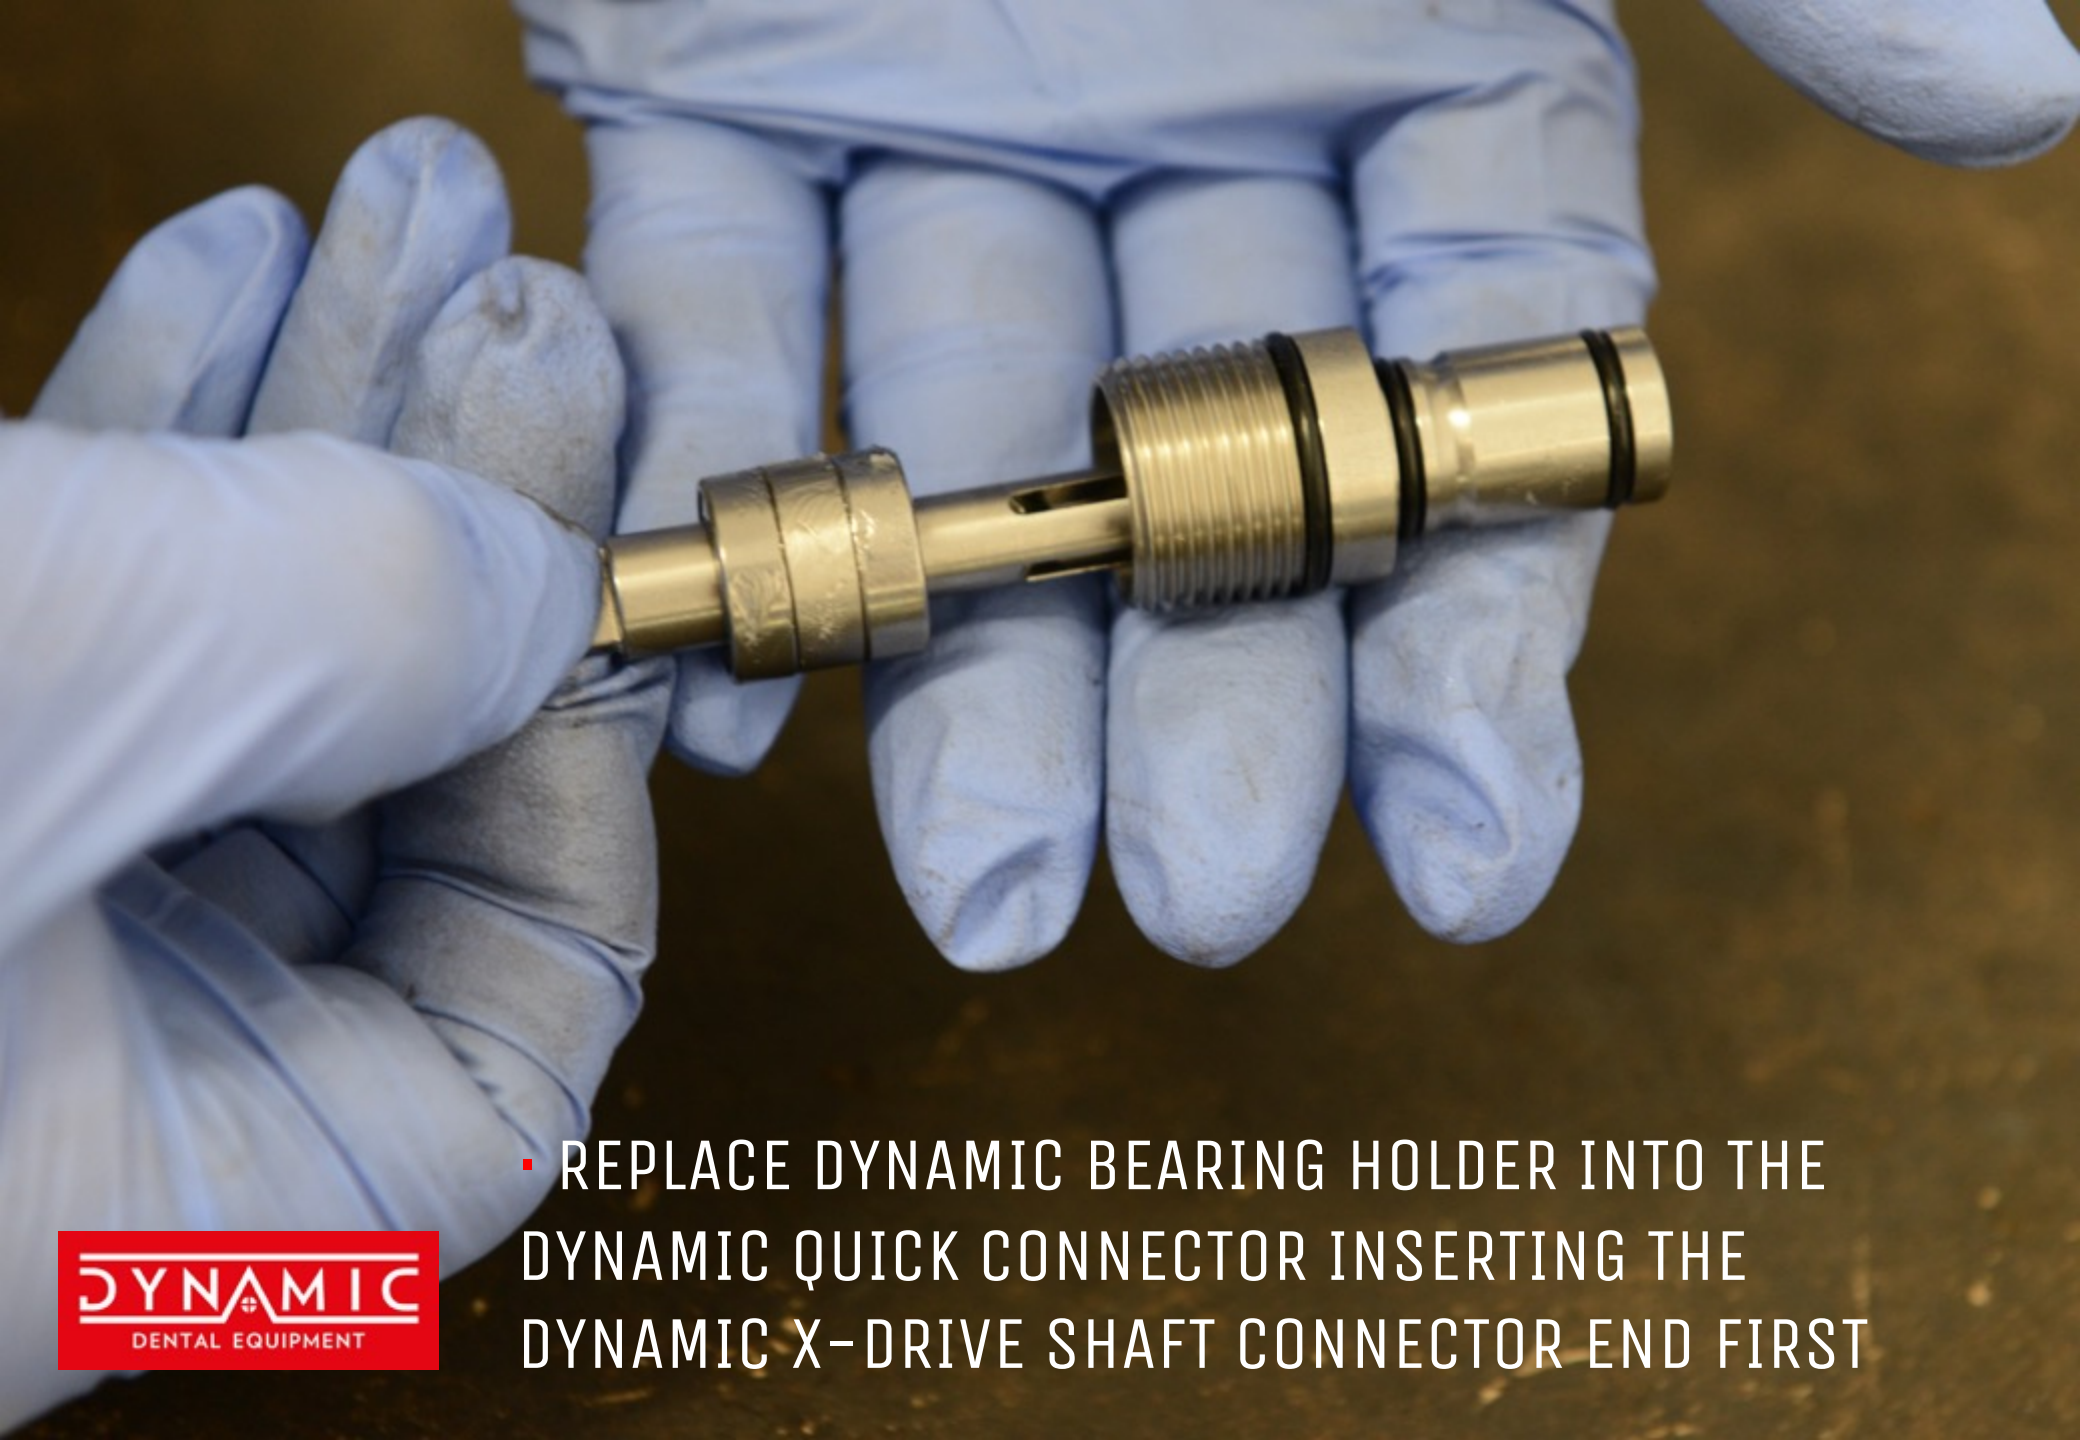

- REPLACE DYNAMIC BEARING HOLDER INTO THE DYNAMIC QUICK CONNECTOR INSERTING THE DYNAMIC X-DRIVE SHAFT CONNECTOR END FIRST

▪ PLACE THE DYNAMIC D-TOOL  
ONTO THE DYNAMIC QUICK  
CONNECTOR MAKING SURE THE  
SLOTS FIT INTO THE HOLES  
TIGHTLY

▪ MAKE SURE ALL 3 OF  
THE DYNAMIC QUICK  
CONNECTOR SEALS  
ARE PRESENT BEFORE  
REPLACING IT INTO  
THE HANDLE



- SCREW THE DYNAMIC QUICK CONNECTOR INTO THE BACK OF THE HANDLE, TIGHTEN USING AN ADJUSTABLE SPANNER UNTIL SECURE

