



HORSEPOWER DIVERSE BURR REPLACEMENT

YOU WILL NEED:

AVAILABLE FROM YOUR DYNAMIC DISTRIBUTOR:

- HORSEPOWER BASIC REPAIR KIT


ALSO REQUIRED:

- ADJUSTABLE SPANNER
- LOCTITE 243
- HEAT GUN

HORSEPOWER BASIC REPAIR KIT

A) 21MM SPANNER

B) HORSEPOWER HEAD LOCKING TOOL

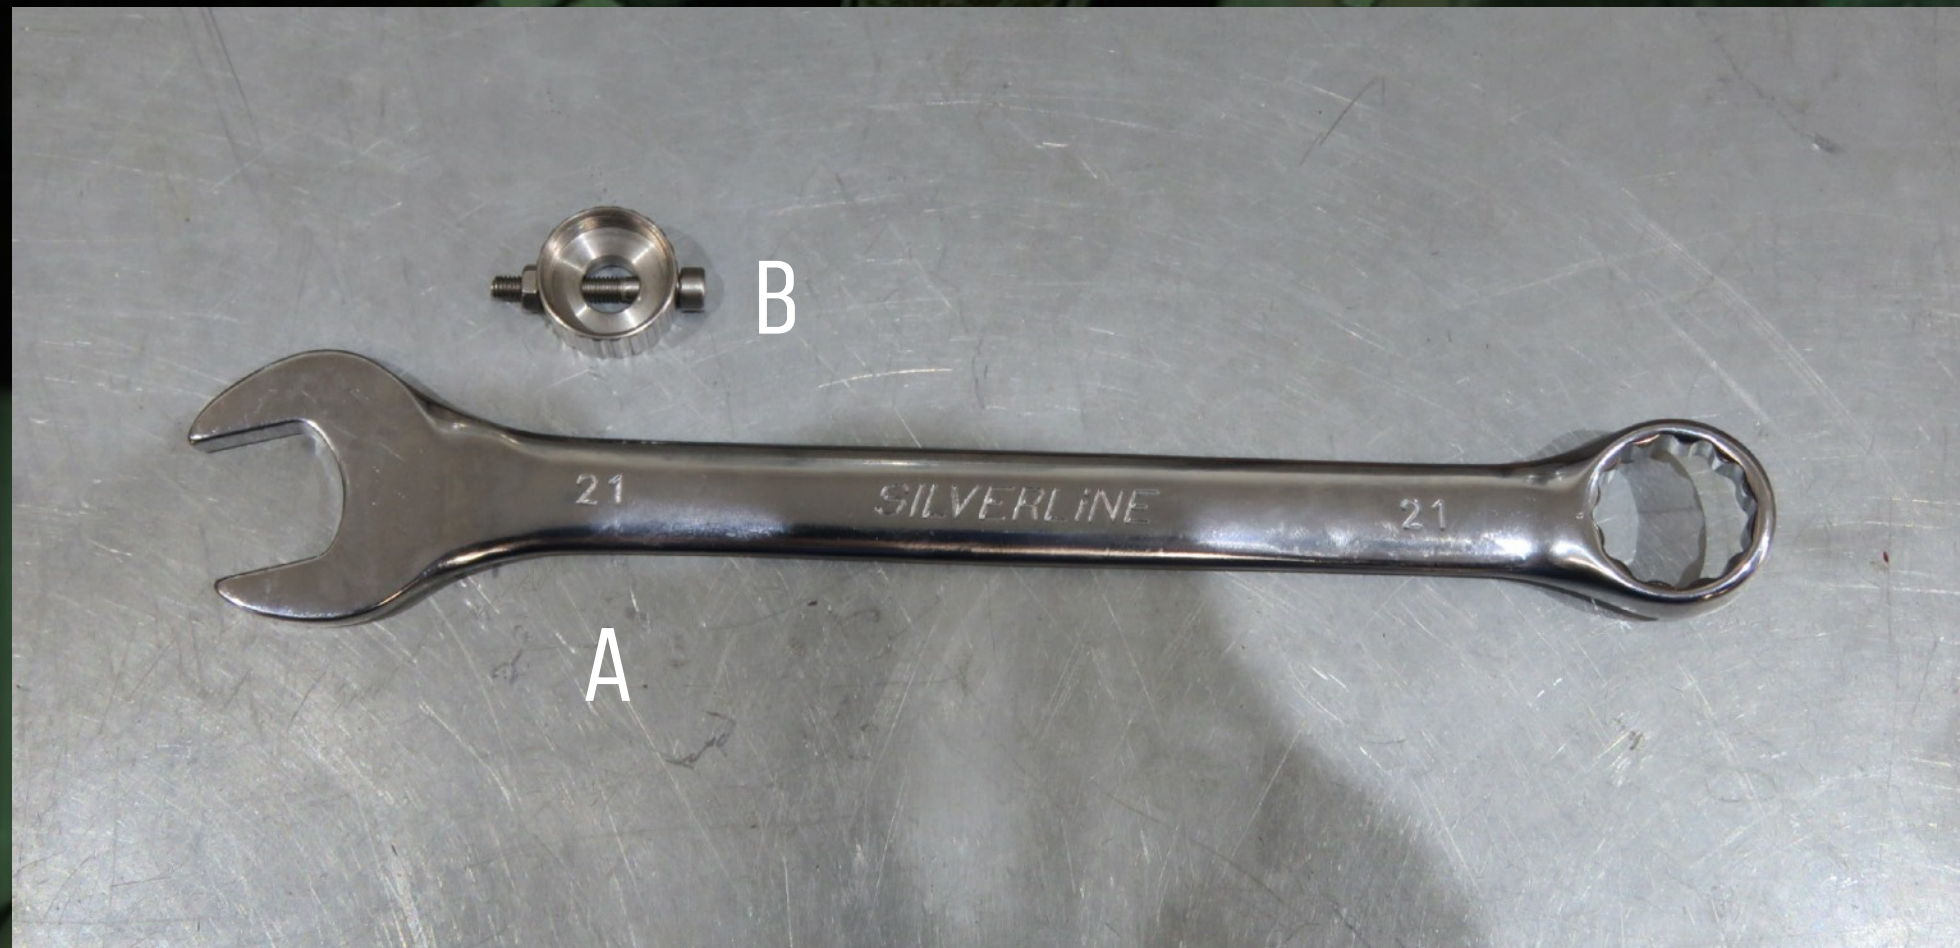

- USING HEAT GUN APPLY HEAT AROUND THE THREADED AREA

- UNSREW HEAD FROM THE SHAFT IN AN ANTI-CLOCKWISE DIRECTION



▪ SCREW THE HORSEPOWER SPECIFIC
HEAD LOCKING TOOL ON TO THE BACK
OF THE HEAD CASING



▪ MAKE SURE THE HOLES LINE UP AND
THEN THREAD THE SCREW THROUGH
THE LOCKING TOOL AND HEAD, AND
TIGHTEN WITH THE NUT





- PLACE THE 21MM SPANNER OVER THE BURR



- ENGAGE THE SPANNER AND ROTATE ANTI-CLOCKWISE



- REMOVE THE OLD BURR



■ INSERT THE NEW BURR



■ TIGHTEN THE BURR
AND TIGHTEN CLOCK-
WISE UNTIL SECURE
WITH 21MM SPANNER



- UNDO THE SMALL NUT AND REMOVE THE BOLT



- UNSCREW THE HORSEPOWER SPECIFIC HEAD LOCKING TOOL ON TO THE BACK OF THE HEAD CASING AND REMOVE



- 
- APPLY LOCTITE 243 THE THREADED AREA
 - RE-ATTACH HEAD TO THE SHAFT, TAKING CARE NOT TO CROSS THREAD.
TIGHTEN BY HAND.